


Leaking from regulator



POSSIBLE CAUSE: Regulator Seal O-Ring is damaged.

SOLUTION: Replace and lube the Regulator Seal O-Ring.

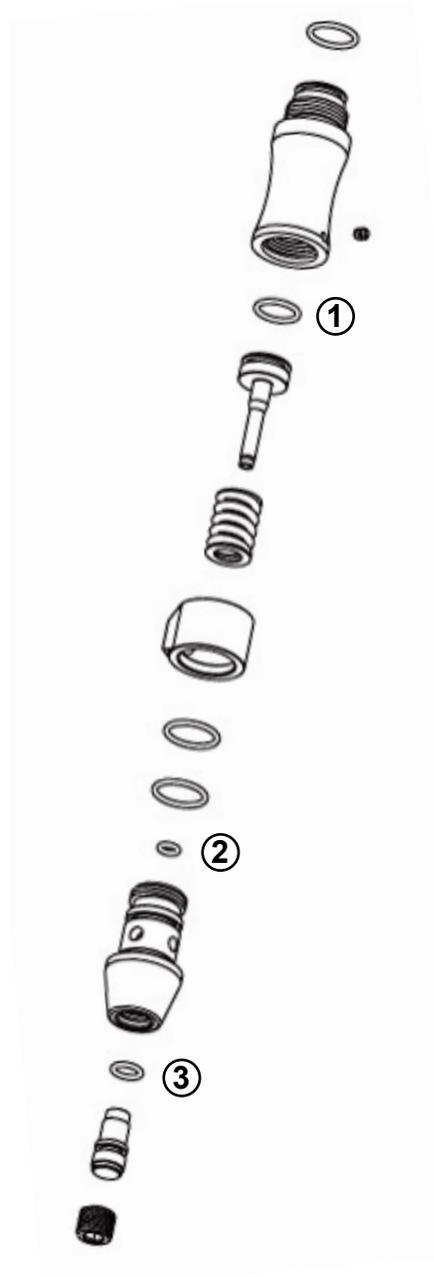

- ① **POSSIBLE CAUSE:** Regulator Piston O-Ring is damaged.
SOLUTION: Replace and lube the Regulator Piston O-Ring.

- ② **POSSIBLE CAUSE:** Regulator Seal O-Ring is damaged.
SOLUTION: Replace and lube the Regulator Seal O-Ring.

- ③ **POSSIBLE CAUSE:** Regulator Inner O-Ring is damaged.
SOLUTION: Replace and lube the Regulator Inner O-Ring.