

RAMPAGE

OLED PROGRAMMING TREE

PROFILE LOAD MENU	
LOAD PROFILE	A
LOAD PROFILE	B
LOAD PROFILE	C
LOAD PROFILE	D
LOAD PROFILE	E
LOAD PROFILE	F

HOT START MENU	
UNCAPPED FIRING	
BREAKOUT MODE	
DRY FIRE MODE	

PROGRAM MENU	
SET PROFILE	A
SET PROFILE	B
SET PROFILE	C
SET PROFILE	D
SET PROFILE	E
SET PROFILE	F
GLOBAL SETUP MENU	
TUNE ASSIST	
RESET MENU	

STATISTICS	
PEAK PULL RATE	00
TOTAL PULLS	000000
TOTAL SHOTS	000000

START MENU	
PROFILE LOAD MENU	
HOT START MENU	
PROGRAM MENU	
TRIGGER TRAINER	
STATISTICS	

TTM		
PEAK	AVRG	
00	00	

Trigger Trainer Mode
The TTM lets you practice your trigger speed. While in TTM, pull the trigger as fast as you can. When you stop, the display will show your Peak and Average pull rates.

SEMI	15.0	X	👁️	🔋	A
------	------	---	----	---	---

RUN Screen
From Left to Right, the Run Screen displays your current firing mode and capped rate of fire, the ball/breach status, Tourney Lock and Eye Status, Battery Level and active Profile.
Ball/Breach ICON Legend
○ with eye beam - Eyes On / Ball in Breach
X with eye beam - Eyes On / Empty Breach
! with eye beam - iFault Condition
? with no beam - Eyes Off

PROFILE {X} SETUP	
MARKER SETPOINTS	
FIRING SETPOINTS	
FIRING MODE ENABLE	

GLOBAL SETUP MENU	
GLOBAL SETPOINTS	
BREAKOUT MODE	
TOURNEY RULES	

TUNE ASSIST	
START	

Tune Assist
Tune Assist quickly and easily allows you to adjust your marker's Dwell and Bolt Return setting to their most optimal settings. It adjusts ALL PROFILES at once.

RESET MENU	
PROFILE A	
PROFILE B	
PROFILE C	
PROFILE D	
PROFILE E	
PROFILE F	
GLOBAL SETPOINTS	
STATISTICS	
DEFAULT ALL	

RESET COMIRM	
CONFIRM RESET	NO

Tourney Rule Menu
If Tournament rules change, you're protected! Your Rampage board has the ability to edit the most popular Tournament firing modes.

MARKER SETPOINTS	
LEAD EDGE DB	5
TRAIL EDGE DB	9
TRIG FILTER	0
SOLENOID DWELL	18
ABS DWELL	0
ABS RESET TIME	10
BREECH DELAY	3
EYE MODE	STD
EYE PROCESS	STD
BOLT RETURN	20
AUTO SHUTOFF	0
AUDIO CONTROL	ON

FIRING SETPOINTS	
TOURNEY MODE	SEMI
CAPPED FIRING	ON
BPS EYES ON	15
BPS FINE	0
BPS EYES OFF	10
BURST SHOTS	3
REACTIVE SHOTS	1
RAMP SEMI SHOT	3
RAMP PULL RATE	4
RAMP MODE	PCNT
RAMP VALUE	1
RAMP RESET	1

FIRING MODE ENABLE	
SEMI	ON
BURST	ON
REACTIVE	ON
AUTO	ON
RAMPING	ON
TOURNEY 1	ON
TOURNEY 2	ON
TOURNEY 3	ON

GLOBAL SETPOINTS	
START PROFILE	A
TOURNY PROFILE	A
SPLASH SCREEN	ON
GAME TIMER	0
TMR START PULL	1
COUNTER MEMO	0

BREAKOUT SETUP	
ENABLE	OFF
START PULLS	3
ADDED BPS	2
FIRING MODE	AUTO
BREAKOUT END	0
AUTO CLEAR	OFF

TOURNEY RULE MENU	
MODE 1 RULES	
MODE 2 RULES	
MODE 3 RULES	

Game Timer
When the Game Timer is enabled, a countdown clock will replace BPS display setting on the Run Screen

TOURNEY 1 RULES	
FORMAT CHAR 1	P
FORMAT CHAR 2	S
FORMAT CHAR 3	P
FORMAT CHAR 4	3
RAMP SEMI SHOT	3
RAMP PULL RATE	0
RAMP MODE	BRST
RAMP VALUE	3
RAMP TIMER	1

TOURNEY 2 RULES	
FORMAT CHAR 1	N
FORMAT CHAR 2	X
FORMAT CHAR 3	L
FORMAT CHAR 4	L
RAMP SEMI SHOT	3
RAMP PULL RATE	0
RAMP MODE	AUTO
RAMP VALUE	1
RAMP RESET	1

TOURNEY 3 RULES	
FORMAT CHAR 1	M
FORMAT CHAR 2	I
FORMAT CHAR 3	L
FORMAT CHAR 4	L
RAMP SEMI SHOT	3
RAMP PULL RATE	6
RAMP MODE	PCNT
RAMP VALUE	1
RAMP RESET	0

Changing Settings Has Never Been Easier!
To change a setpoint's value, simply use the trigger to scroll to the setpoint you want to change and tap your marker's Power or Eye button to increase or decrease the value.

