

**Leaks down the barrel**



**LOCTITE**

**POSSIBLE CAUSE:** Cup seal or cup seal guide is damaged or loose.

**SOLUTION:** Replaced cup seal or cup seal guide/ Apply Loctite on the threaded side of cup seal guide. Loctite needs 24 hrs to completely dry.



**POSSIBLE CAUSE:** Front Valve O-Ring ( R012) is damaged.

**SOLUTION:** Replace Front Valve O-Ring.



**POSSIBLE CAUSE:** Damaged Valve.

**SOLUTION:** Replace Valve.