


# PIRANHA **RAVAGE** INSTRUCTIONS FOR USE

The Ravage eForce grip frame is capable of high rates of fire and an agitating hopper such as an Extreme Rage Overdrive, VL Revolution, Halo, or Evolution 2 is recommended for better performance.

**RAVAGE BATTERY:** The Ravage comes with a 9 volt rechargeable battery. You must charge it for a full 22 hours before initial use since the it does not come fully charged. For best long term battery life, repeat this process every time it is drained. You can also use a regular 9 volt battery with this frame if your rechargeable battery is dead or if you want to play with the frame right away. You will need to remove the right grip panel when you need to replace it.



**WARNING:** PMI RECOMMENDS USING THE 9V RECHARGEABLE BATTERY PROVIDED FOR OPTIMAL PERFORMANCE. DO NOT USE THE BATTERY CHARGER WHEN USING ANY NON-RECHARGEABLE BATTERY.

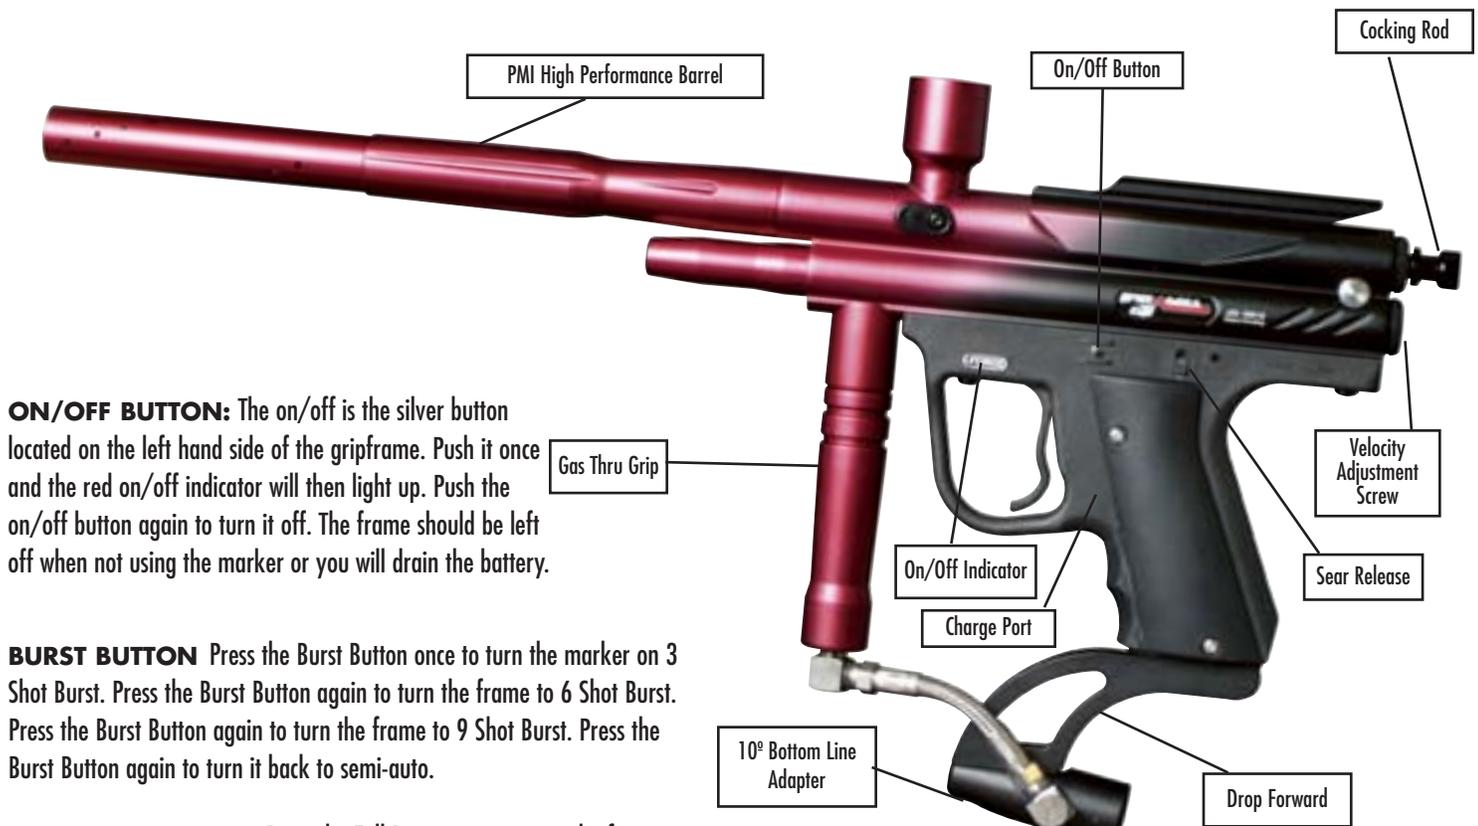

**ON/OFF BUTTON:** The on/off is the silver button located on the left hand side of the gripframe. Push it once and the red on/off indicator will then light up. Push the on/off button again to turn it off. The frame should be left off when not using the marker or you will drain the battery.

**BURST BUTTON** Press the Burst Button once to turn the marker on 3 Shot Burst. Press the Burst Button again to turn the frame to 6 Shot Burst. Press the Burst Button again to turn the frame to 9 Shot Burst. Press the Burst Button again to turn it back to semi-auto.

**FULL AUTO BUTTON** Press the Full Button once to turn the frame to Full Auto. Press the Full Button again to turn it back to semi-auto.


**eFORCE BATTERY** The eForce frame comes with a 9 volt rechargeable battery. You must charge it for a full 22 hours with the marker turned off before initial use since it does not come fully charged. For best long term battery life, repeat this process every time it is drained. You can also use a regular 9 volt battery with this frame if your rechargeable battery is dead or if you want to play with the frame right away. You will need to remove the right grip panel when you need to replace it. A blinking on/off indicator light means your eForce frame needs to be charged right away. Always charge with the marker turned off.

**SEAR RELEASE SLIDE:** The sear release slide is located on the left hand side of the Ravage grip frame. To reinstall the bolt/block/hammer assembly, push the sear release slide up before the hammer comes in contact with the sear. That will allow the bolt/block/hammer assembly to slide easily into the marker.

**TOURNAMENT LOCK SWITCH** The Tournament Lock Switch enables you to play in a tournament or at a field that does not allow full auto and burst modes by restricting the marker to semi-automatic only. All eForce frames come with the Tournament Lock off so you can immediately put the marker in full auto or burst mode. See Piranha manual (5.3) page 32 or Piranha manual (5.1) page 28.



**WARNING:** Never use water to clean the marker, or you run the risk of damaging the electronic trigger frame.

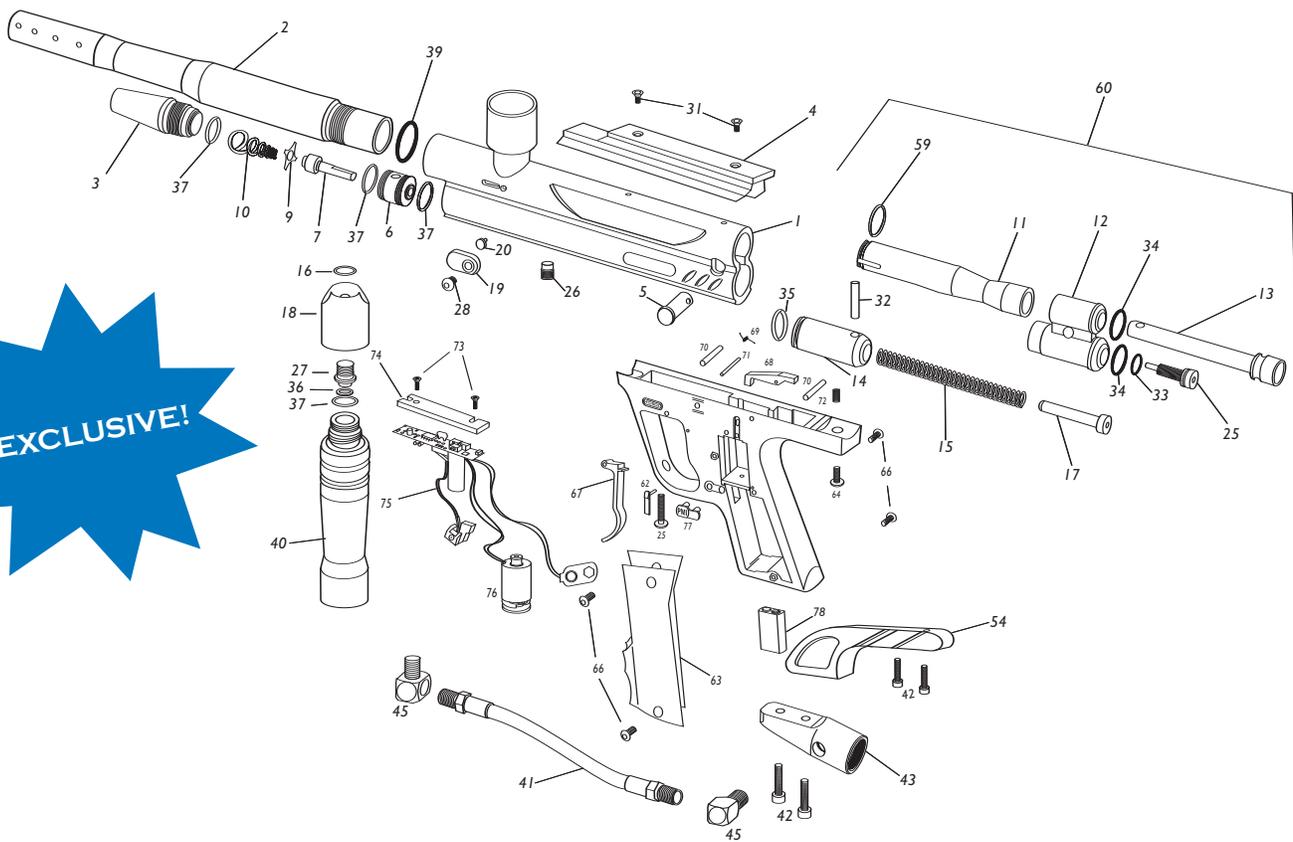

|                             |       |  |       |
|-----------------------------|-------|--|-------|
| 1. Milled Receiver Body     | 71690 | 39. Barrel O-Ring                                | 10161 |
| 2. 9" Barrel                | 10124 | 40. Gas-Thru Foregrip                            | 10788 |
| 3. ASA Slug                 | 71670 | 41. 7" SS hose                                   | 47015 |
| 4. Sight Rail               | 71680 | 42. Bottom line SS screw                         | 42016 |
| 5. Field Strip Pin Assembly | 10021 | 43. 10° Bottom Line Adapter                      | 42013 |
| 6. Valve Body               | 10027 | 45. 90° Elbows                                   | 47000 |
| 7. Valve Cup Seal Assembly  | 10127 | 54. Drop Forward                                 | 71242 |
| 9. Valve Guide              | 10520 | 59. Front Bolt O-Ring                            | 57738 |
| 10. Valve Spring            | 71597 | 60. Standard Cocking B/B/H Assembly              | 71297 |
| 11. Minlon Bolt             | 71668 | 61. eForce Polymer Double Trigger Frame Assembly | 59093 |
| 12. Rear Block w/ Cushion   | 71662 | 62. eForce Sear Release Slide                    | 71585 |
| 13. Minlon Cocking Rod      | 71669 | 63. Grip   | 70105 |
| 14. Hammer Assembly         | 10024 | 64. Rear Trigger Frame Screw                     | 71583 |
| 15. Blue Hammer Spring      | 10351 | 65. Front eForce Trigger Frame Screw             | 71582 |
| 16. ASA O-ring              | 10608 | 66. Grip Screws                                  | 10782 |
| 17. Spring Guide            | 10301 | 67. eForce Trigger                               | 71586 |
| 18. Vertical ASA Adapter    | 71520 | 68. eForce Sear                                  | 71591 |
| 19. Ball Detent Cap         | 10101 | 69. eForce Trigger Spring                        | 71587 |
| 20. Ball Detent             | 10160 | 70. eForce Sear/Trigger Pin                      | 71588 |
| 25. Velocity Screw          | 10026 | 71. eForce Trigger/Spring Pin                    | 71589 |
| 26. Valve Set Screw         | 10513 | 72. eForce Sear Spring                           | 71590 |
| 27. ASA Screw               | 71580 | 73. eForce Board Screws                          | 71592 |
| 28. Ball Detent Screw       | 10180 | 74. eForce Board Cover                           | 71593 |
| 31. Sight Rail Screws       | 20010 | 75. eForce Electronic Board                      | 71594 |
| 32. Bolt Pin                | 10291 | 76. eForce Solenoid                              | 71595 |
| 33. Velocity Screw O-Ring   | 10460 | 77. eForce Charge Port Cover                     | 71596 |
| 34. Rear Block O-Rings      | 10260 | 78. 8.4V Rechargeable Battery                    | 70181 |
| 35. Blue Hammer O-Ring      | 10129 |  |       |
| 36. Screen Filter           | 71667 |  |       |
| 37. Valve O-Rings           | 41010 |  |       |
| 37. Gas Thru Grip O-Ring    | 41010 |  |       |
| 37. ASA Slug O-Ring         | 41010 |  |       |