



DIRECT MOUNT MAINTENANCE

The following is a step by step guide to help you maintain your CP Direct Mount on/off.

Tools you will need:

Needle nose pliers

O-ring pick

O-ring grease (Dow 55, Dow 33, etc)

Step 1

Remove grip frame attachment screws



Step 2

Remove gas wall insert by grabbing with needle nose pliers and pulling out.



Step 3

Remove plunger and main seal retainer by grabbing tip of plunger and pulling out. USE CAUTION NOT TO SCAR ANY SURFACES! GRAB VERY TIP ONLY!




Step 4

Remove and replace internal o-ring. O-ring size is 017.



Step 5

Remove main seal retainer from plunger.

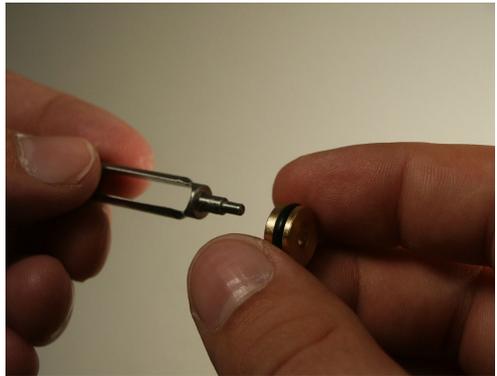


Step 6

Remove and replace main seal retainer o-ring. O-ring size is 011.



Step 7

Remove and replace gas wall o-ring. O-ring size is 006.

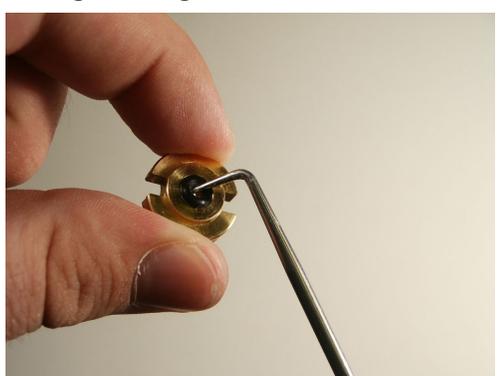


Step 8

Grease forward tip of plunger.



Step 9

Insert plunger into direct mount body. Make sure that open groove on plunger aligns with attachment screw holes.

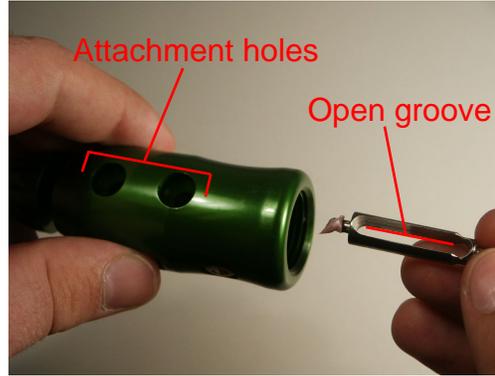

Step 10

Insert attachment screws to prevent any plunger missalignment.



Step 11

Grease around rear tip of plunger.



Step 12

Grease around internal oring.



Step 13

Insert main seal retainer. Cupped side down.



Step 14

Press into place with needle nose pliers. It will sit flush when properly placed. USE CAUTION NOT TO SCAR ANY SURFACES.



Step 15

Grease gas wall insert o-ring.



Step 16

Insert gas wall. O-ring facing internally.



Step 17

Press into place with needle nose pliers. It will snap into place when pushed. USE CAUTION NOT TO SCAR ANY SURFACES.



Your done!

Congratulations you have just successfully rebuilt your CP Direct Mount on/off.



Custom Products 1640 W Sunrise Blvd, Gilbert AZ 85233
Ph: 480-539-4820 Fax: 480-497-3273 www.customproducts.us