## The marker is chopping or trapping paint





POSSIBLE CAUSE: Feeding force from hopper or loader is too low

**SOLUTION:** Adjust loader setting / use higher feeding force hopper or loader





POSSIBLE CAUSE: Wrong matching between paintball and barrel.

**SOLUTION:** Use right size and quality paintball.



POSSIBLE CAUSE: Breech is dirty.

**SOLUTION:** Clean the breech.



**POSSIBLE CAUSE:** Barrel is dirty.

**SOLUTION:** Clean the barrel.